


Operating Instructions

Included Setup Instructions

POWER SUPPLY Commercial Use

Model No. **ET-RPS100G**

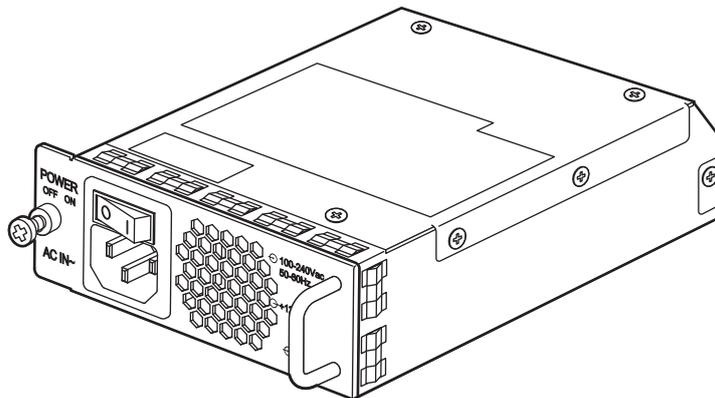

Thank you for purchasing this Panasonic product.

- Before using this product, please read this “Operating Instructions” and the “Operating Instructions” of the Multi Window Processor carefully and save the manuals for future use.
- Before using this product, be sure to read “Read this first!” (➡ pages 3 to 7).
- To users:
This product is used together with the Multi Window Processor sold separately. Be sure to ask a qualified technician or your dealer when installing it. This manual is for users and also for installation technician. When installing the unit, provide this manual to installation technician. After installation, ask them to return this manual.
- To installation technician:
Read this manual and perform installation work properly and safely. Be sure to read “Read this first!” (➡ pages 3 to 7) before installation.
After installation, please return this manual to users.

Contents

Be sure to read "Read this first!" from page 3.

Read this first!	3
Precautions for use	8
Disposal	8
Accessories	8
Attaching the POWER SUPPLY	9
Precautions for attaching and removing the POWER SUPPLY	9
Attaching the POWER SUPPLY	9
Removing the POWER SUPPLY	9
Specifications	11

Read this first!

WARNING: THIS APPARATUS MUST BE EARTHED.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DONOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:

1. Remove the plug from the mains socket when this unit is not in use for a prolonged period of time.
2. To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
3. Do not remove the earthing pin on the mains plug. This apparatus is equipped with a three prong earthingtype mains plug. This plug will only fit an earthing-type mains socket. This is a safety feature. If you are unable to insert the plug into the mains socket, contact an electrician. Do not defeat the purpose of the earthing plug.

WARNING:


This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

CAUTION:

To assure continued limit compliance, follow the attached operating instructions, which include using the provided power cord. Any unauthorized changes or modifications to this equipment will void the user's authority to operate.

CAUTION (USA and Canada)

CAUTION: This equipment is equipped with a three-pin grounding-type power plug. Do not remove the grounding pin on the power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician. Do not defeat the purpose of the grounding plug.

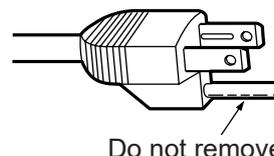

WARNING (USA and Canada)

- Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer/Data Processing Equipment, ANSI/NFPA 75.
- For permanently connected equipment, a readily accessible disconnect device shall be incorporated in the building installation wiring.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

FCC NOTICE (USA)

Verification

Model Number: ET-RPS100G
Trade Name: Panasonic
Responsible Party: Panasonic Corporation of North America
Address: Two Riverfront Plaza, Newark, NJ 07102-5490
Telephone number: (877)803-8492
E-mail: projectorsupport@us.panasonic.com

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To assure continued compliance, follow the attached installation instructions and do not make any unauthorized modifications.

Caution:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTIFICATION (Canada)

This class A digital apparatus complies with Canadian ICES-003.

Product information (for Turkey only)

EEE Yönetmeliğine Uygundur.
EEE Complies with Directive of Turkey.

IMPORTANT: THE MOULDED PLUG (U.K. only)

FOR YOUR SAFETY, PLEASE READ THE FOLLOWING TEXT CAREFULLY.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 13 amp fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 13 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover, the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from an Authorised Service Center.

If the fitted moulded plug is unsuitable for the mains socket in your home, then the fuse should be removed and the plug cut off and disposed of safely. There is a danger of severe electrical shock if the cut off plug is inserted into any 13 amp socket.

If a new plug is to be fitted, please observe the wiring code as shown below.
If in any doubt, please consult a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Green - and - Yellow: Earth
Blue: Neutral
Brown: Live


As the colours of the wire in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured GREEN - AND - YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the Earth symbol  or coloured GREEN or GREEN - AND - YELLOW.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

How to replace the fuse: Open the fuse compartment with a screwdriver and replace the fuse.

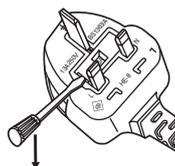

Importer's name and address within the European Union

Panasonic Marketing Europe GmbH

Panasonic Testing Center

Winsbergring 15, 22525 Hamburg, Germany

WARNING:

■ **POWER**

The wall outlet or the circuit breaker shall be installed near the Multi Window Processor and shall be easily accessible when problems occur. If the following problems occur, cut off the power supply immediately.

Continued use of the device in these conditions will result in fire or electric shock.

- If foreign objects or water get inside the device, cut off the power supply.
- If you notice smoke, strange smells or noise coming from the device, cut off the power supply.

Please contact an Authorized Service Center for repairs, and do not attempt to repair the device yourself.

During a thunderstorm, do not touch the device or power plug.

Failure to observe this will result in electric shocks.

Do not do anything that might damage the power cord or power plug.

If the power cord is used while damaged, electric shocks, short-circuits or fire will result.

- Do not damage the power cord, make any modifications to it, place it near any hot objects, bend it excessively, twist it, pull it, place heavy objects on top of it or wrap it into a bundle.

Ask an Authorized Service Center to carry out any repairs to the power cord or power plug that might be necessary.

Completely insert the power plug into the wall outlet, the power connector into the device terminal.

If the plug is not inserted correctly, electric shocks or overheating will result.

- Do not use plugs which are damaged or wall outlets which are coming loose from the wall.

Do not use anything other than the provided power cord.

Failure to observe this will result in fire or electric shocks caused by a short circuit or overheating. Please note that if you do not use the provided power cord to ground the device on the side of the outlet, this may result in electric shocks.

Clean the power plug regularly to prevent it from becoming covered in dust.

Failure to observe this will cause a fire. If dust builds up on the power plug, the resulting humidity can damage the insulation.

- Pull the power plug out from the wall outlet and wipe it with a dry cloth regularly.

Do not handle the power plug or power connector with wet hands.

Failure to observe this will result in electric shocks.

Do not overload the wall outlet.

If the power supply is overloaded (ex., by using too many adaptors), overheating may occur and fire will result.

The AC power cord or adaptor furnished with the device should conform to the type in use in your country. Please compare the plug on your cord or adaptor with the power socket where the device will be installed.

If you did not receive the correct plug, DO NOT attempt to modify it. Instead, immediately contact an Authorized Service Center and request the proper plug.

WARNING:

■ **ON USE/INSTALLATION**

Do not set up the device in humid or dusty places or in places where the device may come into contact with oily smoke or steam, ex. a bathroom.

Using the device under such conditions will result in fire or electrical shock.

Never attempt to remodel or disassemble the device.

High voltages can cause fire or electric shocks.

- For any inspection, adjustment and repair work, please contact an Authorized Service Center.

Do not allow metal objects, flammable objects, or liquids to enter inside of the device. Do not allow the device to get wet.

Doing so may cause short circuits or overheating, and result in fire, electric shock, or malfunction of the device.

- Do not place containers of liquid or metal objects near the device.
- If liquid enters inside of the device, consult your dealer.
- Particular attention must be paid to children.

CAUTION:

■ **POWER**

When disconnecting the power cord, be sure to hold the power plug and power connector.

If the power cord itself is pulled, the lead will become damaged, and fire, short-circuits or serious electric shocks will result.

When not using the device for an extended period of time, disconnect the power plug from the wall outlet.

Failure to do so may result in fire or electric shock.

Disconnect the power plug from the wall outlet before carrying out any cleaning of the device.

Failure to do so may result in electric shock.

Be sure to turn off the power and disconnect the power plug from the wall outlet before carrying out servicing work such as installing to the Multi Window Processor or removing.

Failure to do so may result in electric shock.

If both POWER SUPPLY units are installed, be sure to turn off both of the power before carrying out servicing work.

Failure to do so may result in electric shock.

■ **ON USE/INSTALLATION**

Do not place the device in extremely hot locations.

Doing so will cause the outer casing or internal components to deteriorate, or result in fire.

- Take particular care in locations exposed to direct sunlight or near stoves.

Ask a qualified technician or your dealer when installing or removing this product.

Failure to do so may result in electric shock.

Precautions for use

■ Ask a qualified technician or your dealer when installing the unit to the Multi Window Processor.

Be sure to ask a qualified technician or your dealer when installing the unit to the Multi Window Processor. Static electricity may cause malfunctions.

■ Power cord

Use the supplied power cord only with this unit.

Disposal

To dispose of the product, ask your local authorities or dealer for correct methods of disposal.


Accessories

Make sure that the following accessories are provided with your Multi Window Processor. Numbers enclosed in < > show the number of accessories.

Power cord <1>

(For USA)


(K2CGYY00116)

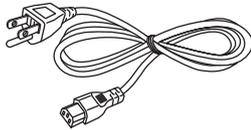

Power cord <1>

(For U.K.)


(K2CT3YY00054)

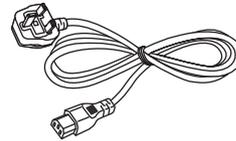

Power cord <1>

(For Europe)

(K2CM3YY00029)

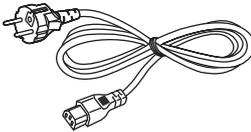

Attention

- After unpacking this device, discard the power cord cap and packaging material properly.
- Use the supplied power cord only with this unit.
- For missing accessories, consult your dealer.

Note

- The model numbers of accessories are subject to change without prior notice.

Attaching the POWER SUPPLY

Be sure to ask a qualified technician or your dealer.

■ To the equipment installer:

Before you begin, make sure to read "Read this first!" (→ page 3).

Precautions for attaching and removing the POWER SUPPLY

- Make sure to turn off the power before attaching or removing the unit to/from the Multi Window Processor.
- Do not touch the connecting part of the POWER SUPPLY directly.
 - Doing so may result in static electricity that damages components.
- To prevent damage by static electricity, touch a metal object nearby to remove electrostatic charge on your body before you begin.
- Be careful to avoid injury when attaching or removing the POWER SUPPLY.
- Install the POWER SUPPLY to the Multi Window Processor by slowly and securely inserting it horizontally into the connector.
 - Incorrect attachment may result in failure to operate or malfunction.

Attaching the POWER SUPPLY

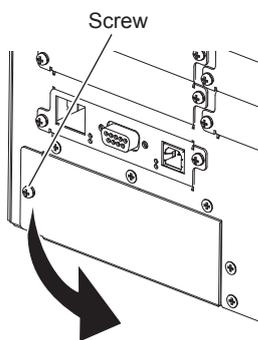


Fig. 1

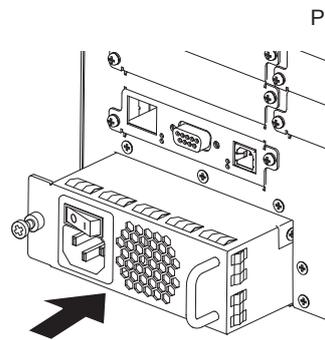


Fig. 2

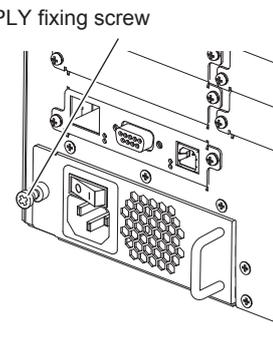


Fig. 3

- 1) **Remove the cover for the POWER SUPPLY attachment section. (Fig. 1)**
 - Use a Phillips-head screwdriver to turn the screw with toothed lock washer (x 1) securing the cover for the POWER SUPPLY attachment section counterclockwise, and slowly open and remove the cover in the direction of the arrow.
- 2) **Carefully insert the new POWER SUPPLY to the insertion position. (Fig. 2)**
 - Make sure that the <POWER> switch of the new POWER SUPPLY is on the <O> side before installing.
 - Insert the POWER SUPPLY fully and securely.
- 3) **Use a Phillips-head screwdriver to securely tighten the POWER SUPPLY fixing screw (x 1). (Fig. 3)**
- 4) **Attach the power cord provided with the POWER SUPPLY to the <AC IN> terminal.**

Attention

- The removed screw with toothed lock washer and the cover for the POWER SUPPLY attachment section will be required when removing the POWER SUPPLY that is no longer needed. Store it for installation at a later date.

Removing the POWER SUPPLY

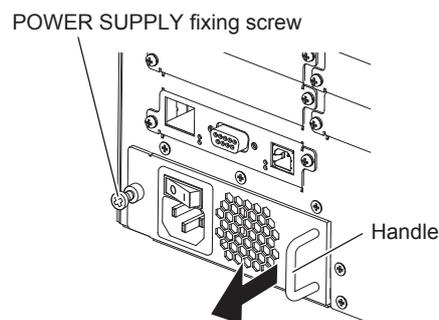


Fig. 1

- 1) **Press the <POWER> switch of the POWER SUPPLY towards the <O> side to turn off the power.**

Attaching the POWER SUPPLY

- 2) **Remove the power plug from the outlet.**
- 3) **Remove the power cord connector from the <AC IN> terminal on the rear of the device.**
- 4) **Remove the POWER SUPPLY. (Fig. 1)**
 - Use a Phillips-head screwdriver to turn the POWER SUPPLY fixing screw (x 1) counterclockwise until it turns freely, and then remove the POWER SUPPLY.
 - Hold the handles of the POWER SUPPLY and slowly remove.
- 5) **Attach the cover for the POWER SUPPLY attachment section.**
 - Attach the stored cover for the POWER SUPPLY attachment section, and tighten to secure with the two screws with toothed lock washers.
 - To replace with another POWER SUPPLY, follow the procedure in "Attaching the POWER SUPPLY".

Attention

- When installing the unit to the Multi Window Processor to form a 2-POWER SUPPLY configuration, remove the power cord connector from the <AC IN> terminal after turning off both POWER SUPPLY units to fully isolate them from the power supply.

Specifications

The specifications of the POWER SUPPLY are as follows.

Dimensions	Width	114 mm (4-1/2")
	Height	40 mm (1-9/16")
	Depth	216 mm (8-1/2")
Weight	Approx. 1.2 kg (2.6 lbs.)	
Supported power supply	AC 100 V - 240 V, 50 Hz/60 Hz	
Compatible Multi Window Processor	ET-MWP100G	

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Environment care information for users in China



This symbol is only valid in China.

Panasonic Corporation

Web Site : <https://panasonic.net/cns/projector/>
© Panasonic Corporation 2013

W0613NK1109 -PJ
Printed in China