

Remote Control Operation

Frequently used functions are assigned their own buttons on the remote control for easy operation.



Useful Functions (Audio)

Adjusting the Volume

During a video conference call, the "VOLUME" can be adjusted.

When the call ends, the volume will return to the pre-set value.



[+] Increase the volume
[-] Decrease the volume

- The volume can be adjusted during a video conference call.
- The remote control included with the HD Visual Communication Unit can be used to adjust the volume of the unit itself. Likewise, the display's remote control can be used to adjust the volume of the display.

Muting the Microphone

During a video conference call, you can mute the microphone (MIC MUTE) so that your voice cannot be heard by the other party.

Using the remote control:



Using the microphone unit:



MIC Mute: Red LED (on)



MIC Mute status

Useful Functions (Video)

Controlling a Video Camera

- You can control a connected PTZ (Pan/Tilt/Zoom) camera.



[Up] Tilt upwards
[Down] Tilt downwards
[Left] Pan left
[Right] Pan right



[+] Zoom in
[-] Zoom out




During a video conference call, press [CAM CTRL] to control the other party's video camera.

Displaying a Computer's Screen or the Sub Video Camera's Image

- You can share the contents of a computer's screen or the image of the sub video camera with the other party.
- Supported Resolutions PC: Full-HD, WSXGA+, UXGA, WXGA++, WXGA+, FWXGA, SXGA, WXGA, HD, XGA, SVGA, VGA / Sub Video Camera: Full-HD, HD

Connect to the HDMI jack of PC In.

Connect to the Sub jack of HDMI.

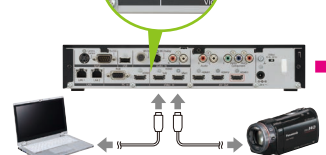

Ex.: Using a single screen during single stream communication



To end the sharing of contents, press [CAMERA MAIN].

- The other party's image is displayed again.



Useful Functions (Other)

Changing the Screen Layout

During a video conference call, press [LAYOUT].

- Press the [LAYOUT] button repeatedly to cycle through the difference layout configurations.



Ex.: Sub-site, 1 display, Single stream communication

