

WV-ASF950 System NTP Setting Guide


Nov. 2020, Ver.1.00

Panasonic i-PRO Sensing Solutions Co., Ltd.

How to adjust the time (FacePRO and WV-ASM300)




In the system consisting of the FacePRO (WV-ASF950), WV-ASM300 and i-PRO Recorder, please use the external NTP server or use i-PRO recorder as NTP server.

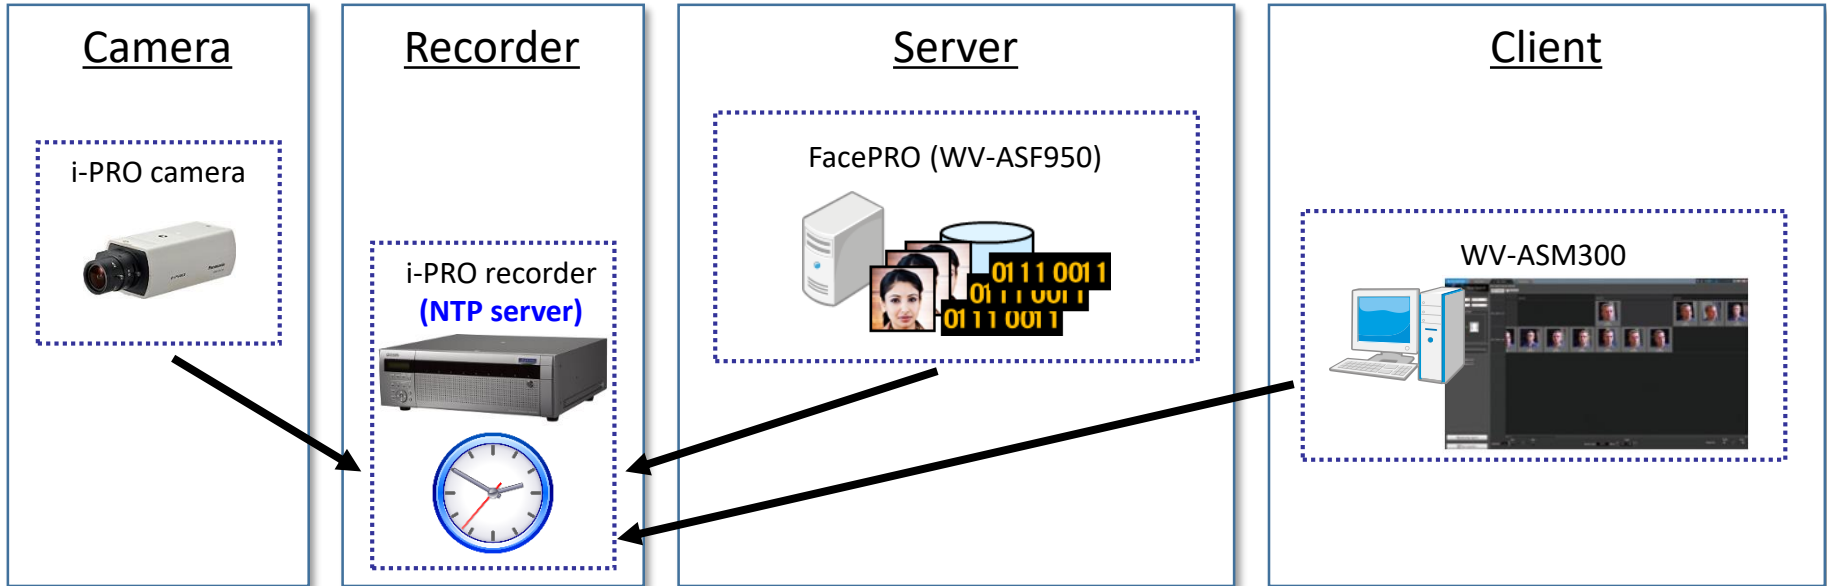

How to adjust the time (FacePRO and WV-ASM300)

In the system consisting of the FacePRO (WV-ASF950) and the VMS (Video Insight, Genetec and Milestone), please use the external NTP server or set up NTP server on VMS server as following pages.


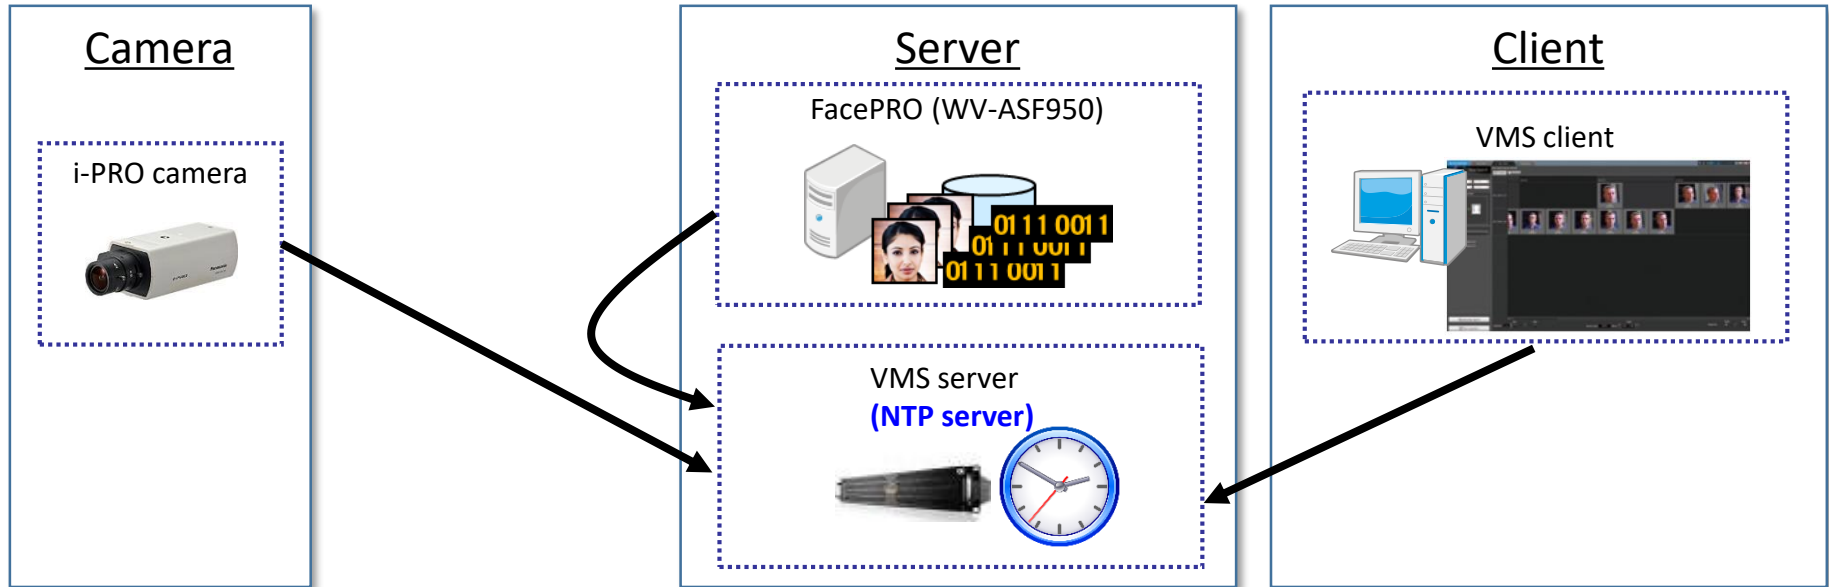


Procedure to set up NTP server on VMS server

1. Start the Registry Editor, and open the following key.


“HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\TimeProviders\NtpServer”

2. Change the value of “Enabled” key to “1”.

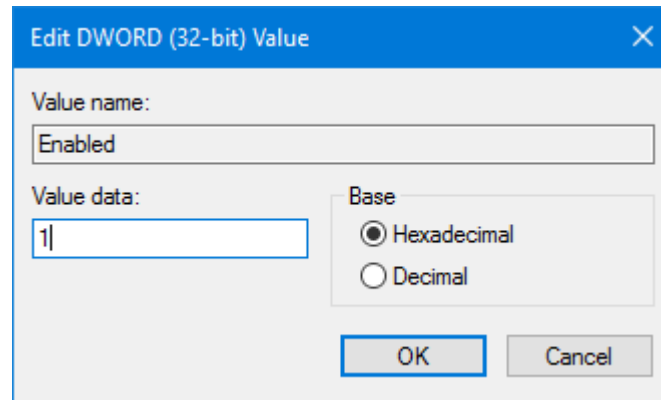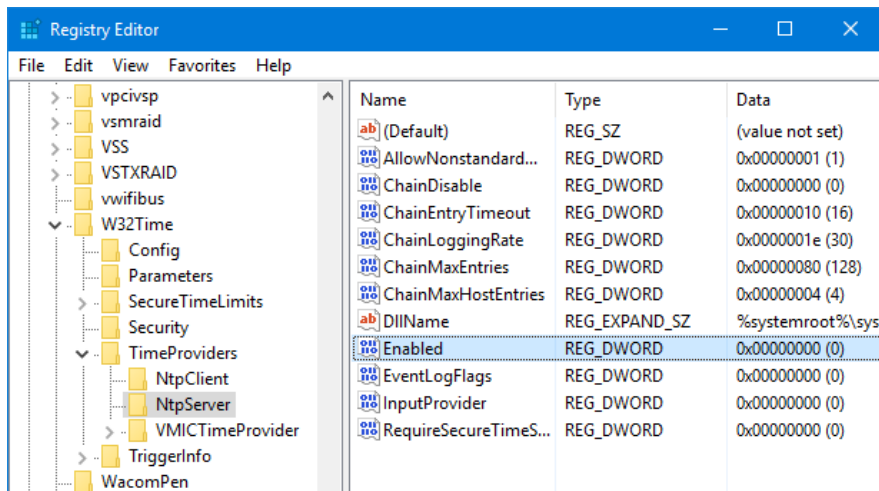


3. Start the Registry Editor, and open the following key.

“HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\Config”


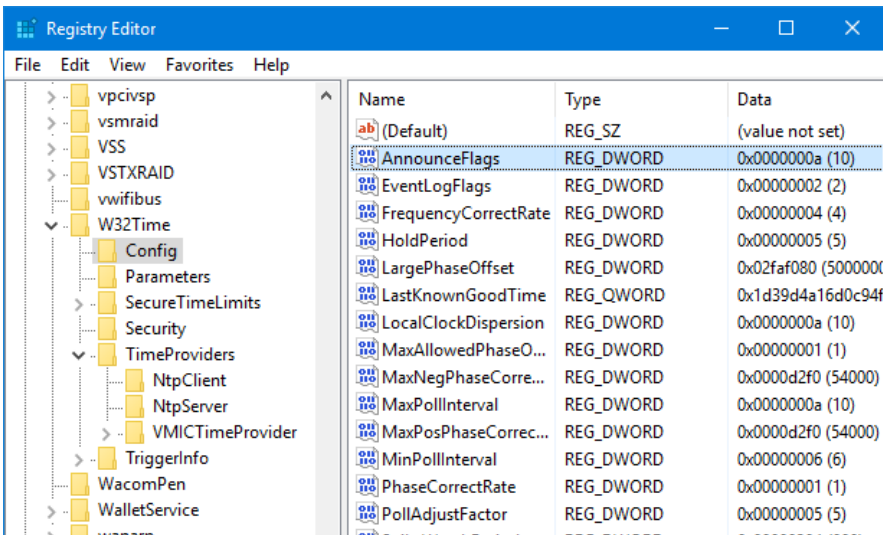


4. Change the value of “AnnounceFlags” key to “5”.

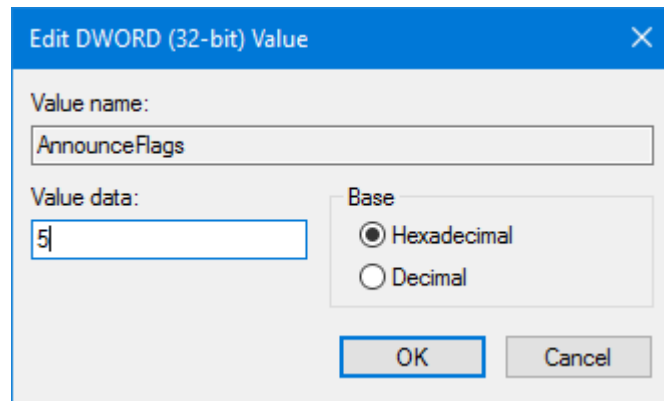


5. Run the Command Prompt as administrator.


6. Input “net stop w32time” then ENTER .
After that, input “net start w32time” then ENTER.

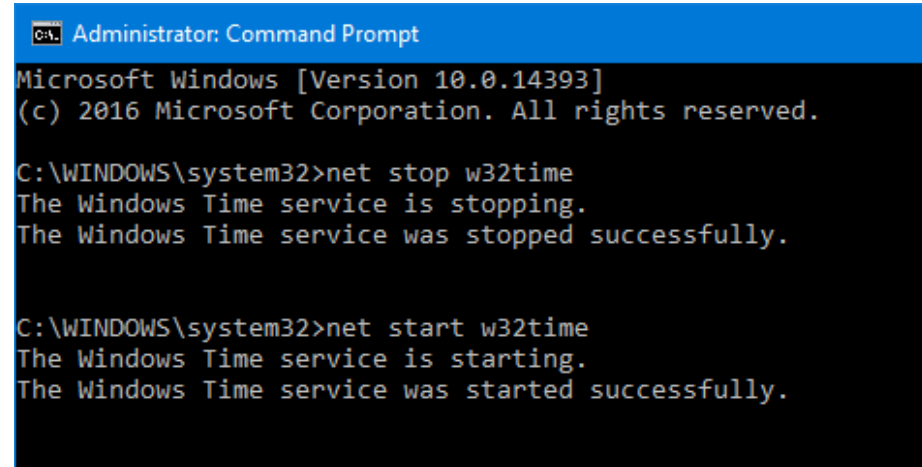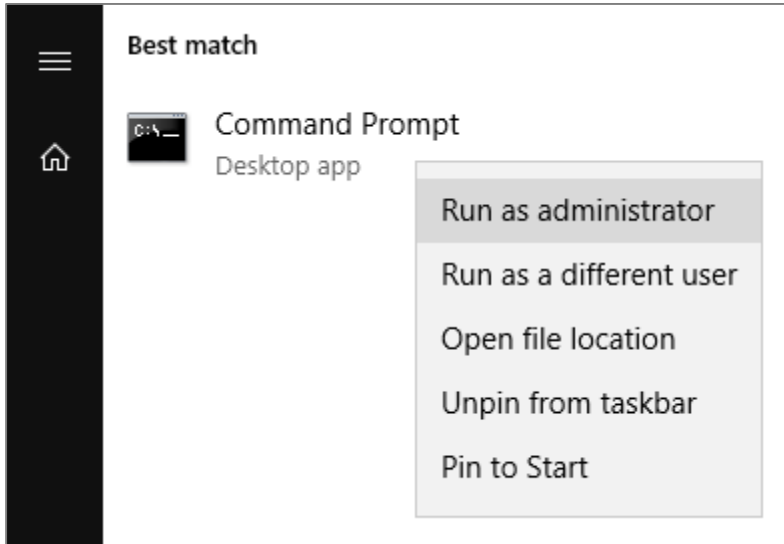


7. Open Control panel – Windows Firewall setting, and Click “Advanced settings”

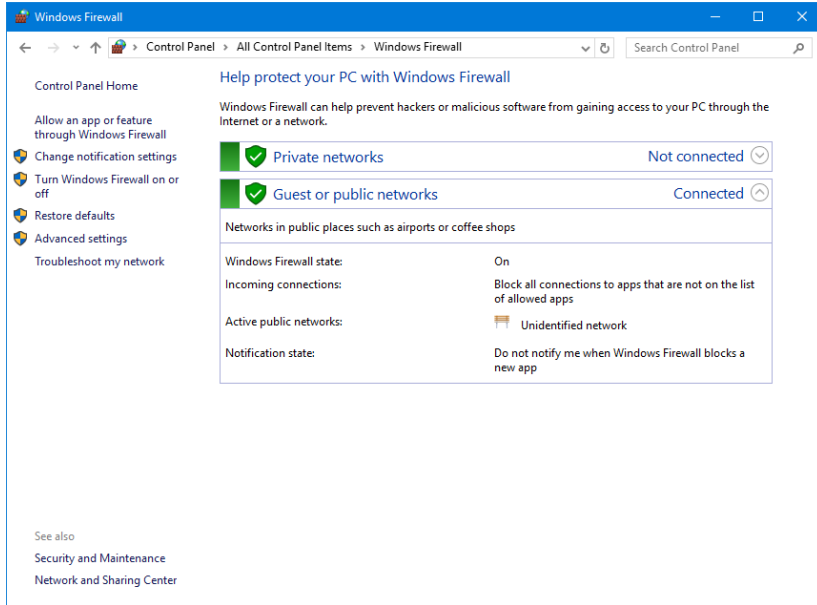


8. Select “Inbound Rules” and “New Rule” in right click menu.

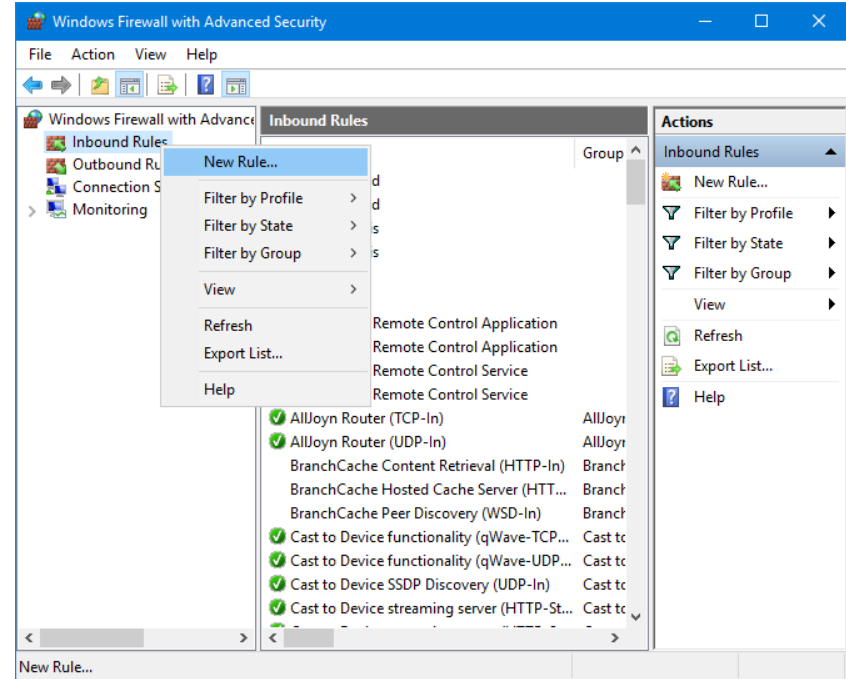


9. Select “Port” and “Next” button, then Select “UDP” and input “123” in “Specific local ports”, and click “Next” button.

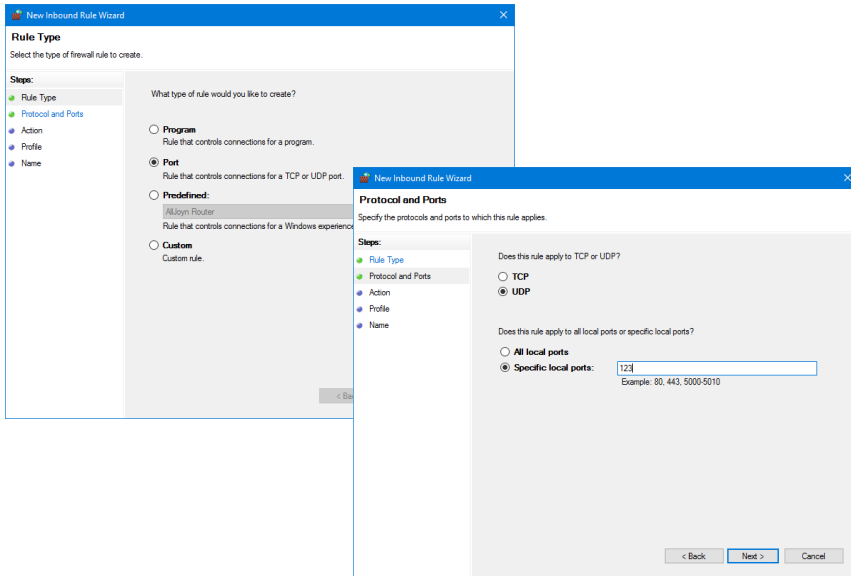

10. Select “Allow the connection”, Check the target networks in “Domain, Private and Public”, and Input Name as “NTP port”.

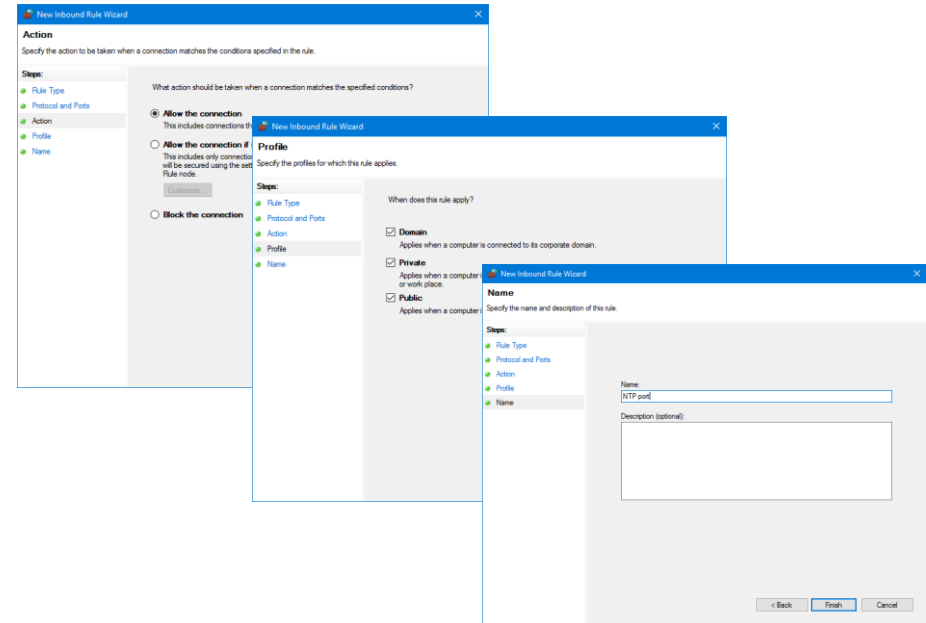

11. Open Control panel - Administrative Tools - Services menu. Select “Windows Time”, then select “Automatic” in “Startup type” as right click menu “Properties”.

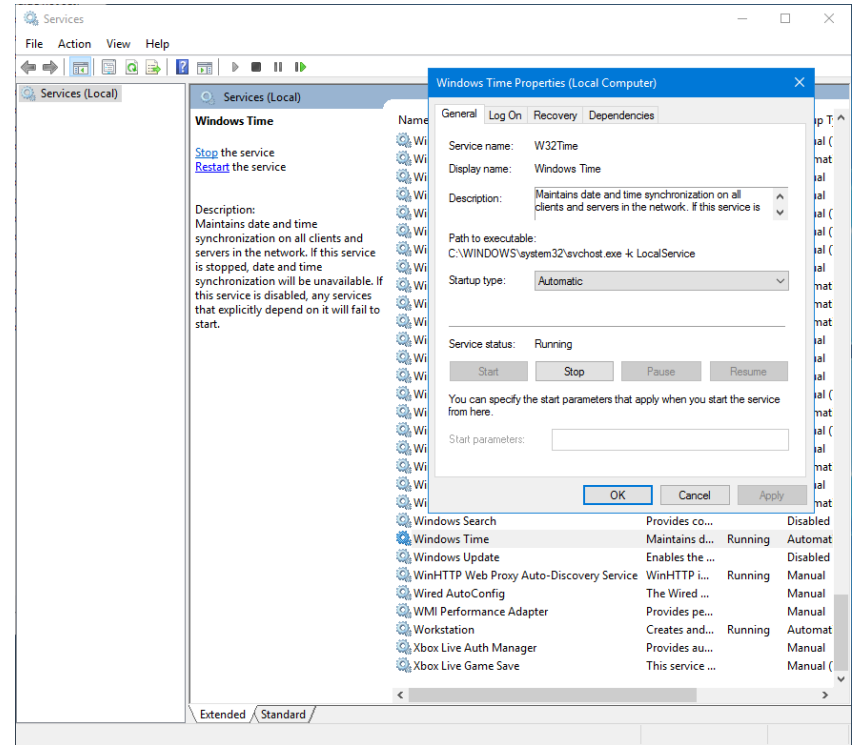

-PRO